






## Bravo FLX/LX

### Green Button

Used to turn pager on, read messages and confirm selections.

### Black Button

Used to access features of the pager:

Symbol	Function
	Silent Alarm (vibe)
	Audible Alert
	Alarm
	Message Lock
	Continuous Message – Message continues on the next screen

### Turning Pager On

Press green button to turn on pager. To turn pager off press black button until "PAGER OFF?" is displayed. Press the green button to confirm. Pager is now off.

### Incoming Page

Press any button to silence. Press green button to display message.

### Changing Alert

Press black button until "AUDIO" or "SILENT" is displayed, press green button to confirm. Press black button until "SET ALERT" is displayed, press green button to confirm. Press black button to scroll through the five alerts, press green button to select the one you want.

### Setting Time

Press black button until "SET TIME?" is displayed, press green button to confirm. The hour flashes, press black button to change the hour, press green button to switch to minutes. Follow same procedure to set minutes, when you are through setting the time press the black rectangular button on the left side of the pager twice and it will return to the standby screen.

### Setting Alarm

Follow the same procedure for setting time. Press the black oval button to switch on/off. The bell symbol is displayed when alarm is set. Alarm will activate even when pager is off. Press any button to stop the alarm alert.

### Protecting and Unprotecting Messages

To save message press black button while reading message "PROTECT?" is displayed. Press green button to protect message, the lock symbol will appear indicating message is saved. To unprotect a message press black button while reading the saved message. The "UNPROTECT?" is displayed. Press green button to remove protection. The lock symbol will be removed from the screen. Saved messages cannot be erased or overwritten. You can lock up to eight pages.

### Erasing Messages

Press black button until "ERASE ALL?" is displayed. Press green button. All your read, unprotected messages are erased. Note: "ERASE ALL?" is displayed only if there are messages in memory. To erase individual pages press black button twice while reading a message and "DELETE?" will display. Press green button to delete message.

### Turning Light On and Off

To turn light on press black button on side of pager. To turn light off press button again. (Light will time out after several seconds.)

### Setting Date

Press black round button until "SET DATE?" is displayed. Follow same procedure for setting time.