




Elite/Gold Quick Card








Reading an Incoming Message

- 1 Press any button to stop the alert.
- 2 Press  to display your message.
A flashing  in the right corner of the screen indicates the message is continued on an additional screen(s).
- 3 Press  to read the next screen.

Deleting Messages

This feature allows you to delete unlocked and un-alarmed messages.

To Delete a Single Message

- 1 From the Message-Status screen, press  or  to select the message you want to delete.
- 2 Press .
- 3 Press  to move the cursor to .
- 4 Press  DELETE MESSAGE? is displayed.
- 5 Press  again to delete the message.

To Delete a Message While Reading It







Follow steps 2 through 5 above while the message is displayed.

To Delete All Unlocked, Un-alarmed and Read Messages

- 1 From the Function Menu, press  to move the cursor to .
- 2 Press  DELETE ALL MESSAGES? is displayed.
- 3 Press  All unlocked, un-alarmed and read messages are deleted.



Note: Notebook messages are not deleted with this feature.

Setting the Time and Date








- 1 From the Function Menu, press  to move the cursor to .
- 2 Press  to display the Set-Time-and-Alarm screen.
- 3 Press  to move the cursor to the hour digit.
- 4 Press  or  to adjust the hour.
- 5 Repeat steps 3 and 4 to adjust the minutes, AM/PM/24 hr., month, day.

Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full.

When a message is locked, the  symbol is replaced by the  symbol indicating the message is locked.




To Lock or Unlock a Message


- 1 From the Message-Status screen, press  or  to select the message you want to lock or unlock.
- 2 Press .
- 3 Press  to move the cursor to  to lock the message, or  to unlock the message.
- 4 Press .

To Lock or Unlock a Message While Reading It

Follow steps 2 through 4 above while the message is displayed.

Setting an Audible Alert

- 1 From the Function Menu, press  to move the cursor to .
- 2 Press .

When  is displayed on the Standby screen, your pager is in the audible alert mode.

Setting a Silent (Vibrate) Alert

Note: If  is not displayed in the Standby screen, your pager is already in the silent alert mode.


- 1 From the Function Menu, press  to move the cursor to .
- 2 Press  to activate the silent alert. The pager vibrates to confirm your selection. The symbol is removed from the Standby screen.

To Enable Display Zoom:*

- 1 From the Function Menu, press  to move the cursor to .
- 2 Press  Display zoom is now active.

* Not available on the Motorola Advisor Gold™

Control Buttons & Icons

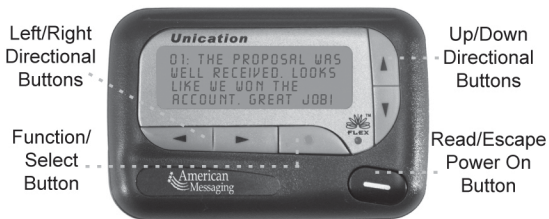

- ♪ Maildrop Alert Enabled *
- 🔇 Maildrop Alert Disabled *
- 🔊 Choose Alert
- 🕒 Set Time and Alarm
- 🕒 Set Private Time *
- 🔍 Display Zoom On/Off
- 🔇 Set Silent Alerts
- 🔊 Set Audible Alert
- 🔇 Turn Pager Off
- ↔ Escape (to Message-status screen)
- 🗑 Delete Message
- 🗑 Delete All Messages
- 🔓 Unlock Message
- 🔊 Turn Maildrop Alert On ‡
- 🔇 Turn Maildrop Alert Off ‡
- 📖 Add to Notebook
- 🔋 Low Battery Indicator
- 🔋 Full Battery Indicator

* Elite only

‡ Gold only

Turning Your Pager On

Press **Power On Button**. A start-up screen is momentarily displayed and your pager activates the currently selected alert.

Turning Your Pager Off

- 1 Press **Function/Select Button** to display the Function Menu.
- 2 Press **Left/Right Directional Buttons** to move the cursor to **Turn Pager Off**.
- 3 Press **Power On Button**. TURN PAGER OFF? is displayed.
- 4 Press **Power On Button** again to turn the pager off.

Batteries

Pager requires one AA battery. When battery icon is clear (🔋) it is time to change the battery.

MyAirMail.com Website

American Messaging paging customers can be sent a message by sending an email to their ten-digit pager number@MyAirMail.com. Messages sent from MyAirMail.com are confirmed as received by our network, and this website connects real-time to the American Messaging network and helps to avoid server delays commonly experienced with email delivery.