




 







## Pager Controls and Indicators

### Icons:


	Alarm is set		Message continues
	Vibrate mode		Out-Of-Range
	Musical alert		Battery Low
	New message		Phone Book
	Message is locked		Auto On/Off is active

**Function** - Press to move between features and change values.

 **Select/Backlight** - Press to select features and turn backlight on or off.

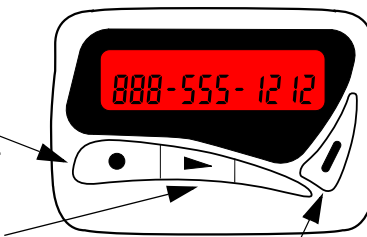

 **Read/Escape** - Press to read messages or return to the Status screen.

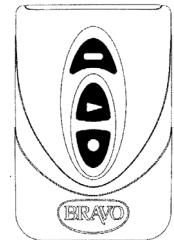


- **Function:** Press to move between features and change values.
- ▶ **Select/Backlight:** Press to select features and turn on/off the backlight.
- ▬ **Read/Escape:** Press to read messages or return to the Status screen.

**Contents**
 
<b>Introduction</b> .....	<b>1</b>	<b>Phone Book</b> .....	<b>10</b>
Pager Controls and Indicators .....	1	Adding Phone Numbers .....	10
<b>Getting Started</b> .....	<b>3</b>	Modifying Phone Numbers .....	11
Battery Information.....	3	Browsing Your Phone Book Entries ....	11
Installing/Replacing the Battery .....	3	Searching Your Phone Book Entries...	12
Turning Your Pager On.....	4	<b>QuickWords</b> .....	<b>12</b>
Turning Your Pager Off.....	4	<b>Setting the Auto On/Off Times</b> .....	<b>13</b>
Turning on the Backlight. ....	4	<b>Setting the Countdown Timer</b> .....	<b>13</b>
Pager Tips.....	4		
Personalizing Your Bravo 500 Pager.....	5		
<b>Time and Date</b> .....	<b>5</b>		
Setting the Time.....	5		
Setting the Date .....	6		
Setting the Alarm .....	6		
Displaying Date or Day of the Week ....	7		
<b>Setting the Message Alert</b> .....	<b>7</b>		
<b>Setting the Reminder Alert</b> .....	<b>7</b>		
<b>Messages</b> .....	<b>8</b>		
Reading Messages .....	8		
Locking/Unlocking Messages .....	8		
Storing Individual Messages .....	9		
Deleting Messages .....	9		


## Getting Started

### Battery Information

Your pager uses one AAA-size alkaline battery (do not use carbon zinc batteries). If  is displayed, the battery is low. Replace the battery.

### Installing/Replacing the Battery

 **Note:** You only have two minutes to replace the old battery with the new battery. Otherwise, you may lose all saved settings and pages.

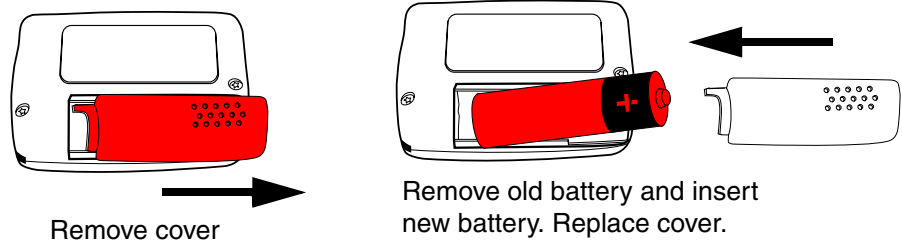


**Caution!** You must match the (+) and (-) polarity markings. If you insert the battery backwards, your pager settings (time, date, etc.) will be erased.





### Turning Your Pager On

 Press	To Display	Description
—	Status Screen 	The Status screen displays the date and time and other status indicators.

### Turning Your Pager Off

Press	To Display	Then Press
●	PAGER OFF	▶

### Turning on the Backlight.

Press	To Display	Then Press
▶ and hold	Backlight	Automatically turns off.

### Pager Tips

1. After 8 seconds of inactivity, the pager returns to the Status screen without saving the changes.
2. Press and hold ● to speed up the scrolling of the character being changed.

### Personalizing Your Bravo 500 Pager

Press	To Display	Then Press
●	<i>POWER UP SCR</i>	▶ to display Power Up
● to set character	<i>A to 9</i>	▶ to go to next character
Repeat	Up to 20 characters	■ to save Power Up

### Time and Date

#### Setting the Time

Your pager can be set to a 24-hour format when you buy it, or you can have your Service Center or service provider change it to a 24-hour format.

Press	To Display	Then Press
●	<i>SET TIME</i>	▶ to display the time
● to set the hour	<i>11 to 121</i>	▶ to go to next field
● to set minutes	<i>101 to 100</i>	▶ to go to next field
● for a.m. or p.m.	<i>A or P</i>	■ to save

Time and Date



### Setting the Date

Press	To Display	Then Press
●	<i>SET DATE</i>	▶ to display the date
● to set month	<i>JAN to DEC</i>	▶ to go to next field
● to set day	<i>01 to 31</i>	▶ to go to next field
● to set year.	<i>01</i>	■ to save

**Note:** When you change the date, the day of the week is automatically updated.

### Setting the Alarm

Press	To Display	Then Press
●	<i>SET ALARM</i>	▶ to display alarm status
●	<i>ALARM 1, 2, or 3</i>	▶ to select an alarm
● for alarm type	<i>OFF, DLY, SCH, or MNL</i>	▶ to select alarm type
● and ▶	alarm time [plus month/day if SCH]	▶ to advance to alarm prompt message
● to set character	<i>A to 9</i>	▶ to go to next character
Repeat	up to 20 characters	■ to save

### Displaying Date or Day of the Week

Press	To Display	Then Press
▶ to switch between date & day of the week	JAN 01 12:00 PM or MON 12:00 PM	

### Setting the Message Alert

 
Press	To Display	Then Press
●	SET ALERT	▶ to display alert type
●	VIBRATE, AUDIBLE, NO ALERT	▶ to select alert type
● if AUDIBLE	ALERT 1 to ALERT 12	▶ to select alert tone

### Setting the Reminder Alert

Press	To Display	Then Press
●	SET REMINDER	▶ to activate
●	REM ON	▶ to display setting
●	01 to 60 (minutes)	■ to save



Setting the Message Alert

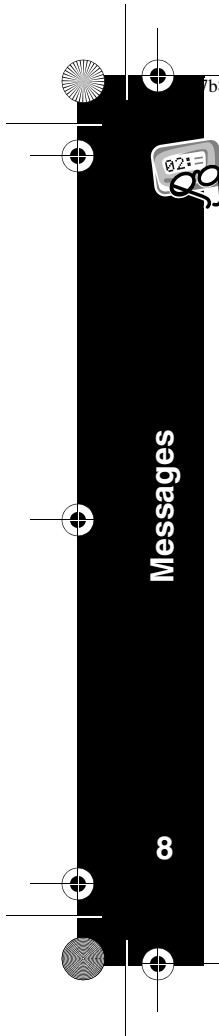

## Messages

Your pager can store up to 20 personal messages and 5 maildrop messages.

### Reading Messages

Press	To Display	Description
—	2 PAGES	Number of messages
—	123-4567	First Numerical message
—	EO 13-A	Number in brackets and address (usually A).
●	next message	

### Locking/Unlocking Messages

You can lock up to ten messages to protect them.

**Note:** You cannot lock maildrop messages.

Press	To Display	Then Press
● with unlocked message displayed	LOCK	▶ to lock the message
● with locked message displayed	UNLOCK	▶ to unlock the message



### Storing Individual Messages

Press	To Display	Then Press
●	SAME DIR	▶ to display NAME prompt
● to set character	A to Z	▶ to go to next character
■ to save name	1d MELODY	● to select music alert
		■ to save

### Deleting Messages

**Note:** Messages must be unlocked before they can be deleted.

#### Deleting a Maildrop Message

Press	To Display	Then Press
● with maildrop message displayed	DELETE MAIL	▶ to delete maildrop message

#### Deleting an Individual Message

Press	To Display	Then Press
●	DELETE MSG	▶ to delete message



### Deleting All Messages

Press	To Display	Then Press
● with Status screen displayed	<i>DELETE ALL</i>	▶ to delete all unlocked messages

### Phone Book

You may store telephone numbers for up to 12 people and assign one of the 9 alert tones to each entry.

#### Adding Phone Numbers

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>Add DIR</i>	▶ to display "NAME" prompt
● and ▶	Full Name	■ to save & display <i>TEL -</i>
● and ▶	Phone Number	■ to save & display <i>1d MELODY</i>
●	<i>123456789</i>	● to hear alert 1
Repeat	Desired alert	▶ to assign alert and exit

### Modifying Phone Numbers

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>MODIFY DIR</i>	▶ to display first entry
●	Desired phone book entry	▶ to edit
● and ▶	Correct Name	■ to save & display <i>TEL -</i>
● and ▶	Correct Phone Number	■ to save & display <i>1d MELODY</i>
▶	<i>123456789</i>	● to select music alert
▶	to save changes	

### Browsing Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>BROWSE</i>	▶ to display first entry
●	Each phone book entry	▶ to view entry





### Searching Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	▶ to display phone book
●	<i>SEARCH</i>	▶ to activate search
● and ▶	First Few Characters	▶ to jump to matching entry

**Note:** If there are no phone book entries that match the search characters, the message *NO SUCH NAME* is displayed.

### QuickWords

QuickWords are short text messages that can be displayed when you are paged (see table below for code; asterisk plus number).

QuickWord Code	Message	QuickWord Code	Message
*0	RUNNING LATE	*5	CALL HOME
*1	ON MY WAY	*6	WHERE ARE U
*2	PICK ME UP	*7	MEET YOU AT
*3	I AM HOME	*8	I LOVE YOU
*4	COME HOME	*9	HAPPY B-DAY

## Setting the Auto On/Off Times

You can set your pager to turn OFF at one time and come back ON at a later time.

Press	To Display	Then Press
●	SEE AUTO	▶ to activate
●	AUTO ON	▶ to display OFF time
● and ▶	Auto Off time	▶ to go to Auto On
● and ▶	Auto On time	■ to save

## Setting the Countdown Timer

Press	To Display	Then Press
●	DOWN TIMER	▶ to display choices
●	ON	▶ to select Timer ON
● and ▶	To set the time in hours, minutes, and seconds	■ to save

**Note:** To display the countdown timer instead of the Status screen, press and hold ■ for 2 seconds. Press ■ to return to the Status screen.



