

LS Series (350/550/750/850)

- Turning Pager On** Press the Read Button once.
- Big Dot/Oval Button** Read Button – Used to turn on the pager, to read messages and navigate through menus.
- Small Dot Button** Menu Button – Used to access pager menus and turn light.
- Check Mark Button** Select Button – Used to select pager settings and features. Also used to read additional screens of messages.
- Incoming Page** Press Read Button to stop the alert and display the number of new messages. Press the Read Button again to display the first unread message. Press Select Button to read next screen or your first message.
- Setting Time/Date** Press Menu Button twice. Press and release Read Button until "SET UP PAGER" is displayed. Press the Select Button. "TIME/DATE" is displayed. Press Select Button. "FORMAT:AM/PM" or "FORMAT:24HR" is displayed. Press and release Read Button until your choice is displayed, then press the Select Button. Repeat to set days.
- Setting Alert** Press Menu Button twice. Press and release Read Button until "SELECT ALERT" is displayed, then press Select Button. Press the Read Button until your choice of "ALERT AUDIO" or "ALERT VIBE" is displayed. Press the Select Button. If audio is selected, press and release the Read Button to choose desired option. Press Select Button twice to activate your selection.
- Deleting Messages** While message is displayed, press Menu Button. "GO>FOLDER" is displayed. Press Read Button until "DELETE MSG" is displayed. Press Select Button.
- OR -
- From standby screen, press Menu Button twice. Press and release Read Button until "DEL ALL MSG" is displayed, then press Select Button. All messages except unread messages and those in the message folder are deleted.
- Turning Pager Off** Press the menu button twice. Press and release the Read Button until "PAGER OFF" is displayed. Press the Select Button once. "OFF" will be displayed momentarily before pager shuts off.