

# Pagers

Owner's Manual

NEC



MessageMaker  
**Companion**<sup>®</sup>  
Pagers



[Click Here For Warranty Information](#)










 


## To Turn Pager On

- Press and hold main button.


## To Turn Pager Off


- Press and hold main button until you hear one beep. Quickly release main button.
- Press main button again and hold down until "**Power OFF**" is displayed and the screen goes blank.





## Setting Clock/Calendar Display

- Press and release main button. "**Set Alerts**" will be displayed.
- Press  repeatedly until "**Set Clock**" is displayed and press  to confirm.
- The hour will be underlined. Press  repeatedly to select the desired hour and press to  confirm.
- The minute will be underlined. Press  repeatedly to select the desired minute and press  to confirm.
- The "**12H**" (12 hour setting) or "**24H**" (24 hour setting) will be underlined. Press  repeatedly to select the desired hour clock setting and press  to confirm.
- Follow the same procedure to select the year, month and day.
- The  (clock display on) or  (clock display off) will be underlined. Press  repeatedly to select and press  to confirm.
- Press main button.










## Changing Calendar Order

- Press and release main button. "**Set Alerts**" will be displayed.
- Press  repeatedly until "**Set Options**" is displayed and

press  to confirm.

- Press  repeatedly until "**Calendar Order**" is displayed and press  to confirm.
- "**D/M/Y**" (Day, Month or Year) or "**M/D/Y**" (Month,Day or Year) will be displayed. Press  repeatedly to select calendar setting and press  to confirm.
- Press main button.

## Selecting "Sound On" Alerts

- Press and release main button. "**Set Alerts**" will be displayed.
- Press  and then press  repeatedly to select "**Sound ON**". Press  to confirm.
- Press  repeatedly to select "**Beep**" or "**Musical**" and press  to confirm.
- When "**Beep**" is selected, press  repeatedly to select either "**Single**" or "**Dual**" and press  to confirm.
- When "**Musical**" is selected, press  repeatedly to select any of the 16 melody alerts ("Melody 1" through "Melody 16") and press  to confirm.

- Press main button.