

P900 Quick Card



- ☑ MailBox
- 📰 News/Info InBox
- ✉ Send Message
- 📶 Vital Signs
- ⏻ Power Off
- ↩ Message Reply
- 🔄 Reply in Progress
- 🔴 Transmitter Off
- ✖ Delete Message/InBox
- ✓ Successful Reply/Send
- ✗ Unsuccessful Reply/Send
- 🔋 Low Battery
- 📧 MailBox Alert, News/Info Alert
- 🔔 Alarm/Set Alarm
- 🕒 Set Time & Date
- 🔊 Alert Volume/Key Click, Reminder Alert
- 📧 InBox - Messages Read
- 🔔 Audible Alert/Alarm
- 📵 Vibrate Alert/Quiet Mode
- 🕒 Private Time
- ✍ Signature

Turning On Your Communicator

Open the flip and press any key to turn your communicator on. The communicator emits a 4-second power-up alert, and displays the Status screen.

Press **SYMBOL MENU / SPACE**, **ENTER**, **←**, **→**, **▲** or **▼** to display the Main menu.

Turning Off Your Communicator

You should turn off your communicator to save battery power. The communicator receives any stored messages, once the unit is turned back on in the coverage area up to 96 hours.

Press	To Display	Then Press
▲ or ▼	⏻ Power Off	ENTER
▲ or ▼	○ Yes	ENTER

Creating an Address Book Entry

Press	To Display	Then Press
▲ or ▼	📧 Address Book	ENTER
▲ or ▼	➕ New Entry	ENTER
Keyboard	Name	ENTER
▲ or ▼	Desired field	ENTER
Keyboard	Address/number	ENTER
Repeat	All desired fields	ENTER
▲ or ▼	📧 Save Entry	ENTER



Composing a Message

Press	To Display	Then Press
▲ or ▼	✉ Send Message	ENTER
▲ or ▼	✍ Write Message	ENTER
Keyboard	Your message	ENTER

Sending a Message

Press	To Display	Then Press
▲ or ▼	✉ Send Message	ENTER
	MESSAGE TRANSMITTING	

Selecting the Address(es)

You can send a message to one or more addresses and to multiple addresses for the same addressee.

Press	To Display	Then Press
▲ or ▼	✉ Send Message	ENTER
▲ or ▼	○ Yes	ENTER

Sending a Custom Reply

Press	To Display	Then Press
SYMBOL MENU / SPACE	Message Options menu	
▲ or ▼	↩ Reply to Message	ENTER
▲ or ▼	✍ Custom Reply	ENTER
Keyboard	Type in your reply.	ENTER
▲ or ▼	✉ Send Message	ENTER
	MESSAGE TRANSMITTING	

Setting the Font Size

Press	To Display	Then Press
▲ or ▼	☰ Preferences	ENTER
▲ or ▼	Aa Font Size	ENTER
▲ or ▼	aa Normal or AA Large	ENTER
	to select.	
		ENTER
	again to save.	

Sending a Custom Reply

Press	To Display	Then Press
SYMBOL MENU / SPACE	Message Options menu	
▲ or ▼	↩ Reply to Message	ENTER
▲ or ▼	✍ Custom Reply	ENTER
Keyboard	Type in your reply.	ENTER
▲ or ▼	✉ Send Message	ENTER
	MESSAGE TRANSMITTING	

Setting the MailBox and the News/Info Alert

Press	To Display	Then Press
▲ or ▼	☰ Preferences	ENTER
▲ or ▼	📧 MailBox Alert	ENTER
	or	
▲ or ▼	📰 News/Info Alert	ENTER
	for a list of available tones.	
▲ or ▼	Desired Alert tone	ENTER
	to select.	
	and	
◀ or ▶	Press SYMBOL MENU / SPACE to	ENTER
	sample the tones.	
	again to save.	

MyAirMail

Send email to a name, not a number! When you register on our MyAirMail website. Log on to www.MyAirMail.com where you can create a personal email address. Maintain a professional appearance with your personal address created within this site that acts just like a standard email address (ex. JaneDoe@MyAirMail.com.) If you do not wish to create a personalized address, all American Messaging customers are able to receive emails using their ten-digit pager number: 9725551212@myairmail.com.

For more product information and user manual visit us at

www.americanmessaging.net