

Renegade pager by Motorola. This user's guide explains how easy it is to use a Renegade pager.

All of the Renegade pager functions are activated through the use of one button, making it the easiest pager to operate.



#### HOW YOU CAN USE A RENEGADE PAGER

- Give your pager number to friends and family.
- Include your pager number in your answering machine or voicemail message.
- Leave your pager number with your child's school, the baby-sitter or even your doctor, so you can always be reached.
- Create "code" messages with numeric patterns to send someone special a secret note.
- If you carry a cellular phone, give your pager number out instead of your cellular number.

#### INTRODUCTION

##### To Turn the Pager ON

- Press and release the button.
- Dashes (- - - - -) indicate the pager is on and ready to receive messages.

##### To Turn the Pager OFF

- Press and hold the button until OFF is displayed, then release the button.

**NOTE:** Messages that have been read are automatically erased when the pager is turned off.

##### Changing the Pager Alert

Press and hold the button until your choice of SILENT or RING is displayed.

When in Audible mode, you hear a beep tone when a message is received. The speaker symbol (K) is displayed.

When in the Silent mode, the pager vibrates when a message is received. Use the silent mode in situations where an audible sound might disturb others.

##### Receiving and Reading Messages

When a page is received, the pager alerts for 8 seconds.

- Press and release the button to stop the alert.
- Press and release the button again to display the message.

Messages that contain more than 12 characters continue on a second screen. This is indicated by a continuation arrow (→) in the lower right corner of the display.

The second screen displays automatically after 8 seconds or by pressing the button.

If the message is left unread, the pager emits a reminder alert every 2 minutes.

The number of unread messages are indicated on the display (e.g. 1 MSG).

Up to ten 20 character messages can be stored in the pager. To read other messages, continue pressing the button to scroll through the messages.

##### Deleting Messages

Read messages are automatically deleted when the pager is turned off.

 
#### OPERATION



6891022B90-A


© Motorola and Renegade are trademarks or registered trademarks of Motorola, Inc.  
 © Copyright 1994 by Motorola, Inc. All Rights Reserved  
 1500 Gateway Blvd., Elmhurst, IL 60120  
 Printed in U.S.A. 3/95

## Renegade



#### FEATURES

- OFF is displayed when there are too many unread messages in memory. If this happens, an incoming message "bumps" the first message (read or unread) out of memory. After scrolling through all of your messages, the standby screen is displayed.
- The duplicate message indicator (M) is displayed in the upper-right corner if the same message is received more than once.
- TONE OFF is displayed when a message is received without numeric data.
- If your pager has the "out of range" feature, T is displayed in the upper-left corner if the pager goes out of the coverage area. As long as this symbol is displayed, you are not able to receive any messages.

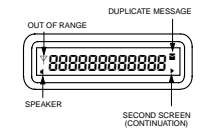

#### FEATURES

##### BATTERIES

Two AAA batteries are required for operation. The Renegade pager has a built-in low battery detector. A low battery alert and warning display (LOW BATT) occurs approximately one week before the end of battery life. Batteries last approximately 850 to 950 hours of continuous use. Turn the pager OFF when not in use to conserve battery life.

##### Battery Installation

Unlock the battery compartment door. Firmly slide the battery door off the back of the Renegade pager and install two AAA alkaline batteries. Match the "+" on the batteries with "+" markings inside the pager. Close the battery door.

**NOTE:** Changing batteries resets pager memory. Please read all messages before removing the batteries.



##### REPAIR AND MAINTENANCE

Your pager properly handled, is capable of many years of trouble-free service. If service is necessary, Motorola's network of Pager Service Centers, staffed with factory-trained specialists, offers top quality services to bring your pager back to factory specifications. Please contact the Pager Service Center nearest you for further information.

MOTOROLA  
 Midwest Pager  
 Service Center  
 (708) 576-6763

MOTOROLA  
 Southwest Pager  
 Service Center  
 (407) 533-0037

MOTOROLA  
 Northeast Pager  
 Service Center  
 (201) 785-0105

MOTOROLA  
 South Central Pager  
 Service Center  
 (214) 241-1881

MOTOROLA  
 Mid Atlantic Pager  
 Service Center  
 (404) 981-5070

MOTOROLA  
 West Coast Pager  
 Service Center  
 (310) 536-0081

#### MAINTENANCE