




# T4 Quick Card







## Reading an Incoming Message

- 1 Press any button to stop the alert.
- 2 Press  to display your message.  
A Message continuation  in the corner of the screen indicates the message is continued on an additional screen(s).
- 3 Press and hold  to scroll screen by screen.

## Deleting Messages





To delete a single message, perform the following steps.

From the Main Screen:






- 1 Press  or  to select the message you want to delete.
- 2 Press  and then press  or  to move the cursor to show DELETE MESSAGE.
- 3 Press  to delete the message.

To delete all read messages, perform the following steps.


From the Main Screen:

- 1 Press  and then press  or  to move the cursor to show DELETE ALL.
- 2 Press  to delete all the read messages.

## Setting the Time and Date

- 1 Press  to display the Set Time Screen.
- 2 Press  or  to move the cursor to display SET TIME.
- 3 Press  to move the cursor to the next digit.
- 4 Press  to adjust the current digit.







Repeat the two previous steps to adjust all the time digits.

- 5 Press  to activate the current setting and exit to the main screen.

## Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when the memory is full.


From the Inbox Folder Status Screen:

- 1 Press  or  to select the message you want to lock or unlock.
- 2 Press  and then press  or  to move the cursor to show LOCK or UNLOCK.
- 3 Press  to activate the setting.







## To Lock or Unlock a Message While Reading It

Follow the last two steps above while the message is displayed.

## Setting Message Alert

To set the Inbox alert, press  to move the cursor to display INBOX.

From the Function menu:

- 1 Press  or  to move the cursor to display SET ALERT.
- 2 Press  to display the Set Alert screen.
- 3 Press  or  to move the cursor to the alert you want to set.
- 4 Press  to activate the alert setting and exit to the Main Screen.







If the device alerting is audible it can be quickly toggled to vibrate.

To set the Info page alerting, press  to move the cursor to display INBOX.

Press  to enter the [Info] folder and follow the same steps above.

## To Enable Display Zoom


From the Function menu:

- 1 Press  or  to move the cursor to display ZOOM.
- 2 Press  to display the zoom screen.
- 3 Press  or  to select the zoom mode desired.
- 2 Press  to activate the zoom and return to the main screen.






# Control Buttons, Indicators and Symbols




## Turning Your Pager On

- 1 Press the read button  for two seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert mode. (Audible, Vibe or Silent.)

## Turning Your Pager Off

- 1 Press the  to display the Function menu.
- 2 Press  or  to move the cursor on OFF icon.
- 3 Press the  button. TURNPAGEROFF? is displayed.
- 4 Press the  button again to turn the pager off.















## Batteries

Pager requires one AA battery. When battery icon is clear (  ) it is time to change the battery. Be sure to insert the new battery quickly. If new battery is inserted within 30 seconds of removing the old battery, messages will be retained.















## MyAirMail.com Website

Verizon Wireless paging customers can be sent a message via email using their ten-digit pager number: 9725551212@MyAirMail.com. Co-workers, family and friends can send a message via MyAirMail.com. This site will send the message to our network and avoid any email delays. Create an account through MyAirMail.com and maintain an address book of VZPaging users.

## Indicators

- |                                                                                   |                                       |                                                                                     |                                  |
|-----------------------------------------------------------------------------------|---------------------------------------|-------------------------------------------------------------------------------------|----------------------------------|
|  | Audio Alert                           |  | In Range or Out Range Indication |
|  | Vibe Alert                            |  | Full Battery Status              |
|  | Enabled Alarm                         |  | 2/3 Battery Status               |
|  | Enabled Private Time                  |  | 1/3 Battery Status               |
|  | New Page or Unread Message Indication |  | Low Battery Status               |
|  | Lock Message                          |  | Message Continuation             |
|  | Unlock Message                        |  | Power On                         |

## Symbols

- |                                                                                   |              |                                                                                     |                  |
|-----------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|------------------|
|  | Inbox Folder |  | Set Private      |
|  | Info Folder  |  | Zoom             |
|  | Saved Folder |  | Enable Reminder  |
|  | Set Time     |  | Disable Reminder |
|  | Set Alarm    |  | Delete All       |
|  | Set Alert    |  | Delete           |
|  | Pager Off    |  | Escape           |