

USER'S MANUAL

Z400TM

The logo features the text 'Z400' in a bold, sans-serif font. The 'Z' and the first '0' are blue, while the '4' and the second '0' are black. The text is set against a light gray shadow that tapers off to the right, giving it a three-dimensional appearance.


FLEX Numeric Pager

SUN TELECOM
INTERNATIONAL

Z400TM

Congratulations on your purchase of a *Z400* Pager. Your new pager will instantly keep you in touch with everyone important. The *Z400* pager is reliable and easy to use as well as affordable, and provides many features that incorporate the most advanced electronic paging technologies. Please read this manual carefully before using your pager for a better understanding of the *Z400* operation.

SUN TELECOM
INTERNATIONAL



1. FEATURES	4
2. BUTTONS	5
3. ICONS AND DESCRIPTIONS	6
4. TURNING PAGER ON	7
5. TURNING PAGER OFF	8
6. RECEIVING AND READING MESSAGES	9
7. LOCKING AND UNLOCKING MESSAGES	10
8. MEMORY	11
9. LOW BATTERY INDICATOR	12
10. CHANGING THE BATTERY	12
11. DUPLICATE MESSAGES	13
12. DELETING INDIVIDUAL MESSAGES	14
13. DELETING ALL MESSAGES	15
14. CHANGING ALERT STATUS	16
15. ALARM	17
16. TIME AND DATE	18
17. LIGHT	19
18. SET VIBRATION/AUDIBLE ALERT	

1. FEATURES

- ▶ 30 message memories
- ▶ 14 locked messages
- ▶ Date & time display
- ▶ Message full indication
- ▶ Vibrate / Chirp / Silent
- ▶ Selective erase
- ▶ Unread message indicator
- ▶ Reflective backlighting
- ▶ Time display when power off
- ▶ Power Up Logo(Optional)
- ▶ User selectable 8 melodies alert & 4 beep tone
- ▶ Receiving time stamping
- ▶ Alarm
- ▶ Erase all
- ▶ Duplicate message indication
- ▶ Memory retention when power off
- ▶ Low battery alarm
- ▶ Source Display(Optional)

(Specifications are subject to change without prior notice)

2. **BUTTONS**

Function button




Lamp button

Read button

FUNCTION BUTTON

- Turn pager on
- Enter Function mode
- Complete setting process in each function

LAMP BUTTON

- Turn the light On or Off
- Escape to the standby screen, which shows time, date, alarm status, and alert status.
- Press  twice to escape to the standby screen.


READ BUTTON


- Read messages
- Select setting and features in Function mode
- Turn pager On

3.

ICONS AND DESCRIPTIONS

 : Alert (Beep) On

 : Alert (Melody) On

 : Alert (Vibrate) On

 : Alarm On

 : Message Lock

 : Duplicate Message

new : New Unreaded message

 : Change Battery

 : Message longer than 12 Char

4. TURNING PAGER ON



OFF 06:00A

< Power off mode >



01-01 06:00A

< Stand by screen >

Press and hold the Read button or Function button for 2seconds while pager is in the Off mode. Time and date will appear on the bottom center of the screen.


Upon inserting a battery, pager will vibrate and beep briefly as it enters the normal reception mode.

If there are new unread messages, the **new** icon and the number of unread messages will displayed on the screen.

And if all the messages are read, the number of messages in memory will displayed.


5.

TURNING PAGER OFF

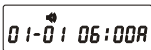


01-01 06:00A

Press the Function button to enter the Function mode.
Press the Function button four times until "POWER OFF?" is displayed on the screen.

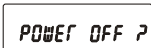

POWER OFF ?

Press Read button to enter Pager Off mode.

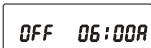

OFF 06:00A

6.

RECEIVING AND READING

MESSAGES

01-01 06:00A

When a message is received, the selected Alert will be activated.

01 new
012345678901 ▶

Press the Read button to stop the Alert and to read messages.

The following information will be displayed in the order of the newest to the oldest message:

01
2

Message number, time stamp and message.

Reading messages with 13 Characters or more

01
01-01 06:00A

messages with 13 or more characters will display "▶" at the top right corner of the screen.

Press the Read button to read the rest of the message.

7.

LOCKING AND UNLOCKING MESSAGES



0 123456 789

A maximum of 14 messages can be locked.
Select a message to be locked and press the Function button.



LOCK ?

When "LOCK?" is displayed, press the Read button to lock the message. The Lock icon will be displayed, and the message will be locked.



0 123456 789

To unlock messages, select the message to be unlocked and then press the Function button to display "UNLOCK?" on the screen.



UNLOCK ?

Press the Read button.



0 123456 789

Locked messages will remain in memory even during low battery power, and while the battery is being changed.

Press the Lamp button twice to escape to the standby screen.

 
8.

MEMORY

Pager has the memory capacity to store 30 numeric messages, with a maximum of 20 characters per message.

9.

LOW BATTERY INDICATOR



When the battery capacity falls below the operational level, the Low Battery icon will be displayed and the voltage alarm tone will be activated.

 
10.

CHANGING THE BATTERY

When changing the battery, you will need to lock all messages you want to save or they will be lost. (Refer to #7 Locking and Unlocking Messages.) When the battery is removed, you will lose the seconds of time that it takes

11.

DUPLICATE MESSAGES



Duplicate Message Indicator will be displayed on the screen when the pager receives a message that is identical to a message in memory.

12. DELETING INDIVIDUAL MESSAGES

0 123456 789

DELETE ?

UNLOCK^a ?

To Delete Individual Messages:

After reading messages, enter into Function mode by pressing the Function button two times until "DELETE?" is displayed on the screen.

Press Read button, message is deleted and another message is displayed.

To Delete a Locked Message:

It is necessary to convert the locked message into unlocked condition before the message can be deleted.

13.

DELETING ALL MESSAGES

Deletion of All Messages:



Press the Function button to enter the Function mode.
To display "DELETE ALL?" sign, press Function Button three times.

On "DELETE ALL?" sign, press Read button to delete all message except locked messages and Unread messages.


14.



CHANGING ALERT STATUS


 01-01 06:00A

SET ALERT?


 BEEP 1234


 MEL 12345678

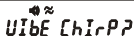

 UIbE [hIrP?

SILENT?


Press the Function button to enter the Function mode.

Press the Function button five times until "SET ALERT?" is displayed on the screen.

Press the Read button until the desired Alert is selected.

Press the Function button to complete the process.


15. ALARM

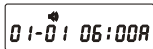

01-01 06:00A



SET ALARM ?

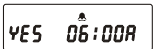

YES 06:00A

Press the Function button to enter the Function mode.
Press the Function button six times until "SET ALARM?" is displayed on the screen.


Press Read button to enter into Alarm-setting mode.
To choose and set desired condition, press Read button to toggle (Ex. YES NO).

To move to each field (hour, minute, am/pm), press the Function button.


16. TIME AND DATE




01-01 06:00A

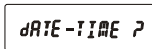

DATE-TIME ?

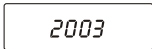

2003

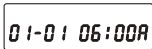

01-01 06:00A



Press the Function button to enter the Function mode. Press the Function button seven times until "DATE TIME?" indicator is displayed on the screen and press Read button.

Press the Read button to change the month, then press the Function button to move to the next field.

17. LIGHT



Lamp button

Press  button to turn the light on.
Press  button again to turn the light off.

18. SET VIBRATION/ AUDIBLE ALERT

AUDIO ?

VIBRATION ?

You can select Vibration or Audible alert mode. At the stand-by screen, press the FUNCTION button to enter into the function menu mode.

Press the Read button to select the audible or vibration mode.

FCC

DECLARATION OF CONFORMITY

PRODUCT NAME : Numeric Pager

MODEL NUMBER : Z400

FCC RULES : TESTED TO COMPLY WITH FCC PART 15, CLASS B

OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INFORMATION TO USER:

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient/Relocate the receiving antenna.
- ❑ Increase the separation between the equipment and receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

Caution : Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

The party responsible for product compliance

SUN TELECOM
INTERNATIONAL

5875 Peachtree Industrial Blvd Suite 160 Norcross, GA 30092